

How to Measure for Vertical Blinds

Measuring your blinds couldn't be easier and it won't take long. Just follow these easy instructions.

Handy Hints

- You will need a good Tape Measure (metal ones are the best)
- When measuring, always look out for things like window handles or tiles and take their position into account if necessary.
- This is so you can be sure of the perfect fit.
- To determine face fit or recess fit check the depth of window sill, clear of handles and window fins. You will require half of blade width +15mm. The blind can still be fitted in recess using top extension brackets with less distance than this but the blind will close outside the wall line allowing a large light gap each side of the window. It is best to face fit if recess is too narrow on window, extending blade 70mm below bottom of architrave (so weights don't bump on timber).

Face Fit

3 simple steps to FACE FIT (Outside Mount)

Follow these instructions if you want the blind to hang outside the window recess:

1. Measure the exact drop from the top of where you want your blind to be to the bottom. Note the measurement.
2. Measure the exact width of where you'd like your blind to be. Note the measurement.




Recess Fit

3 simple steps to RECESS (Inside Mount)

Follow these instructions if you want the blind to hang inside the window recess:

1. Measure the drop by taking the measurement from the top of the bottom window sill in 3 places as shown. Note down the shortest measurement - this is the one we'll use.
2. Measure the width of the recess in 3 places as shown top and bottom of window. Note down the shortest measurement.

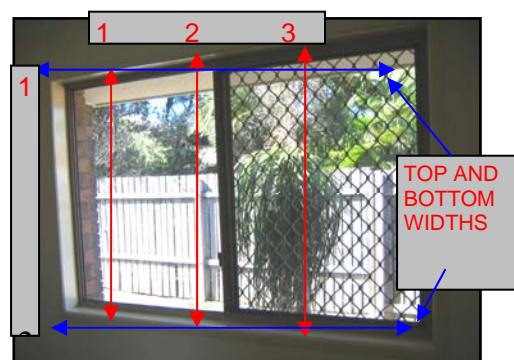

Vertical Blind Bunching/Stacking

Check your window or sliding door opening before making your selection.

Bunch/Stack your blades on the fixed glass side of door or window. This is also your control side. State left or right hand side.

Windows or doors opening from the centre then request centre opening. The blind then stacks half each side of opening (must state control side).

Centre stack is when window or doors open each side of opening (must state control side)